



Quickstart Guide to Operating Instructions IVECO Daily: 1-Way “Bison” Tipper

October 2014 on

IVECO





VFS (Southampton) Ltd.

Unit 8, Barton Park Industrial Estate
Chickenhall Lane
Eastleigh
Hants
SO50 6RR
Tel: 023 8065 1704
Fax: 023 8062 0999
Email: parts@vfs.co.uk

The illustrations, technical information, data and descriptions contained in this publication, were correct at the time of going to print. VFS (Southampton) Ltd reserve the right to make any changes necessary in line with continuous development and improvement.

No liability can be accepted for any inaccuracies or omissions in this publication, although due care has been taken to make it as complete and accurate as possible.

The publication may not be duplicated, reprinted, stored in a data processing system or transmitted by electronic, mechanical, photographic or other means, or recorded, translated, edited, abridged or expanded without the prior written consent of VFS (Southampton) Ltd.

The same also applies for parts of this manual and their use in other publications.

© Copyright 2014, Issued by VFS (Southampton) Ltd.

Part No: VFS12-75-041

Oct 2014

ABOUT THIS QUICKSTART GUIDE

This Quickstart Guide must be referred to and in addition with the standard IVECO Daily Owner's Handbook.

Read and understand both the Guide and the IVECO Daily Owner's Manual and familiarise yourself with the features before operating the vehicle.

Note: This Guide only details the features on the IVECO Daily 1-Way "Bison" Tipper that are not covered in the standard IVECO Daily Owners Handbook.

Note: Always use and operate your vehicle in line with all applicable laws and regulations.

Note: Pass on this Guide when selling your vehicle, as it is an integral part of the vehicle.

WARNING



Tipping is a potentially hazardous operation. You risk death or serious injury to yourself and others if the instructions in this Guide and the Vehicle Owners Handbook are not followed and complied with.

This Quickstart guide is intended as a "First Step" to the safe and correct operation of the Tipping Body.

The complete Owner Handbooks is available to download from www.vfs.co.uk

Ensure full familiarisation of ALL Controls has been achieved before attempting to tip a load.

If in any doubt - do not attempt to operate the Tipper, seek advice before proceeding.


Controls Layout

Electrical Isolation Switch located on LHS of Tipper Subframe

ON



OFF

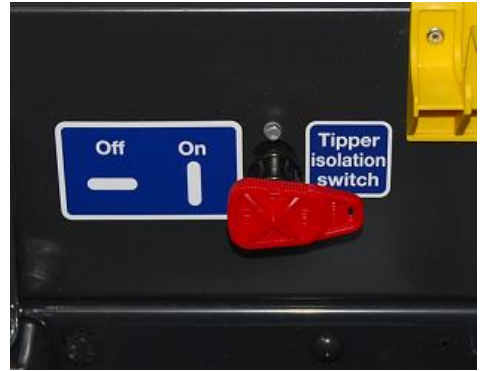

Tipper Control & Wanderlead – Drivers Seat Pedestal



Tipper Control

Press "UP ARROW" to "Raise"



Press "DOWN ARROW" to "Lower"



Emergency Stop


Press to "Engage"



Rotate clockwise to "Release"




Side and Tailboard Release Latch positions – Tipper Body

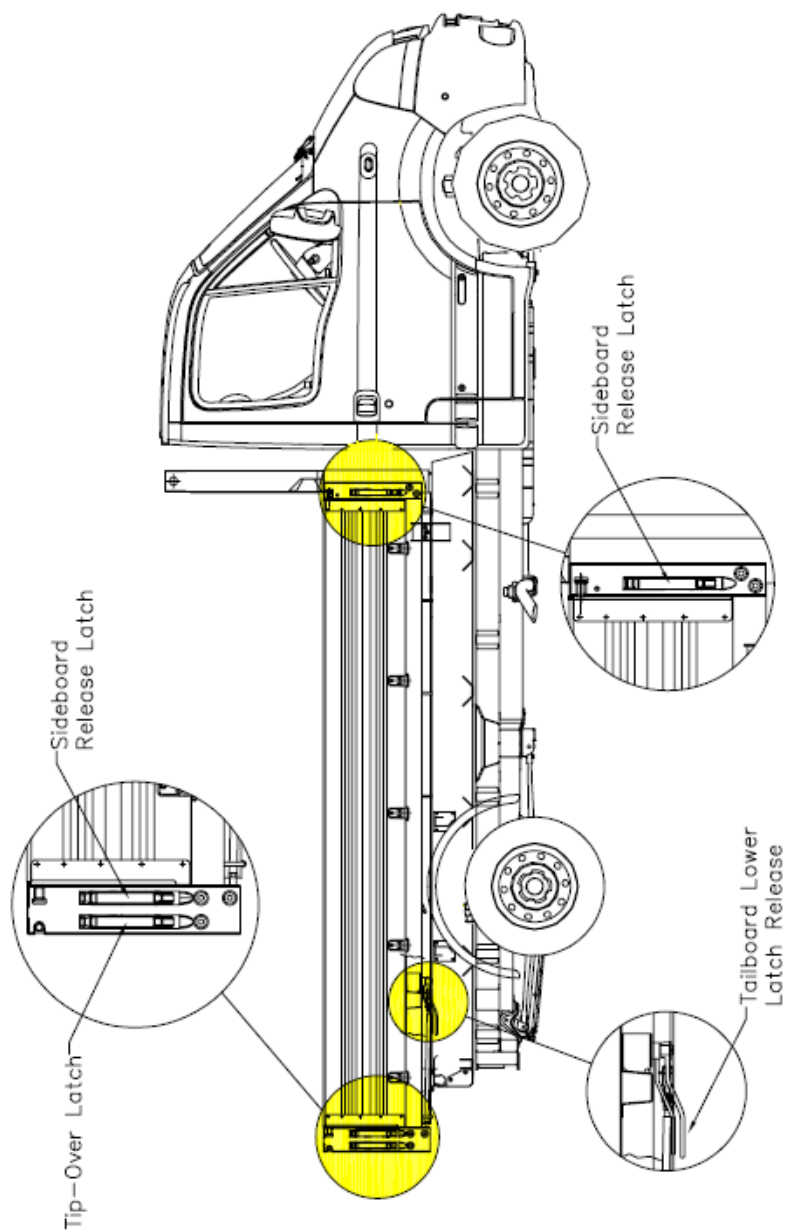

Load Retention

Load Retention – Load Anchorage Points (Tested and Rated) are located inside Tipper Body

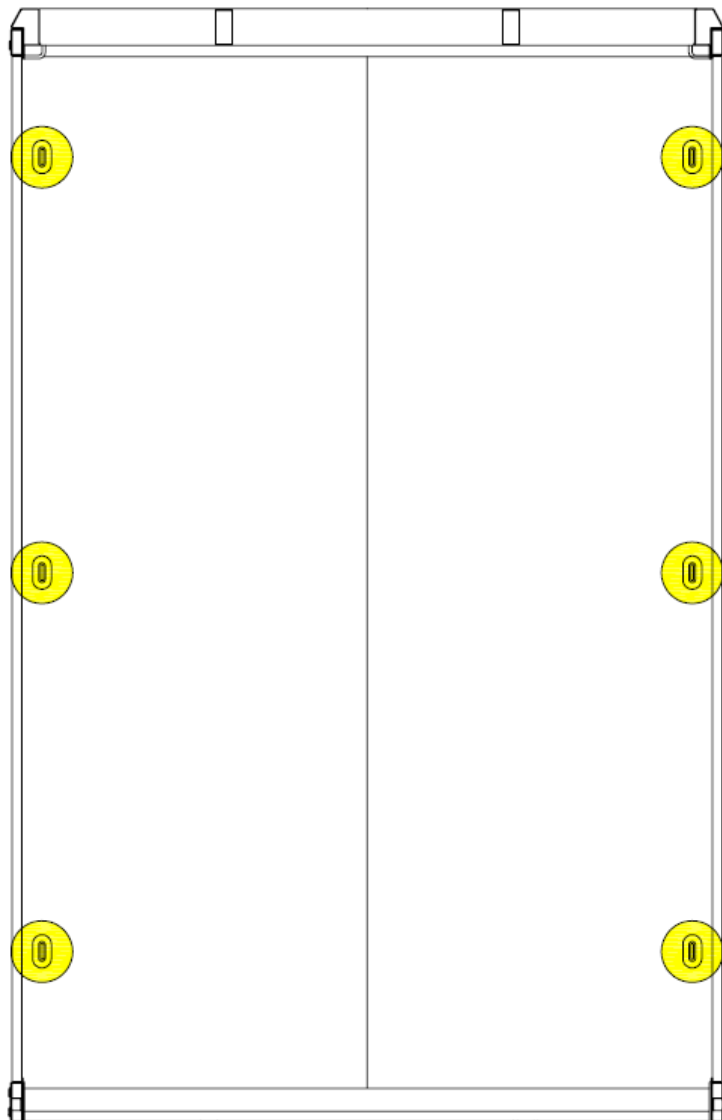

Rear Tailboard configuration (mode)

The tailboard is designed to operate in two different configurations (modes),
The configuration must be determined prior to tipping.

Tip Thru' - (Top Hinged)



Tip Over – (Bottom Hinged)



Use Tip-Thru ' mode :

To open tailboard :

Locate the yellow remote operating handle (in “locked” position) and pull outward and forwards until it stops.



To close/lock tailboard :

Push the tailboard closed.
Holding the tailboard in the closed position.

Return the remote release lever to the “locked” position.

Check the lower remote release handle is locked and the tailboard is secure.



Use - Tip-over mode :

To open Tailboard :

Hold the top of the tailboard
and release the rearmost latch,
Repeat the action for the other latch.
Lower the tailboard - **Do Not Drop.**



To close/lock Tailboard :

Rotate upwards to its closed position
Close the latches

Check for Security !



To open Sideboard :

Hold the top of the sideboard
Release the front latch.
Repeat the action for the rear latch
Lower the sideboard – **Do Not Drop**



To close/lock Sideboard:

Lift the sideboard and rotate it until closed
Close the latches

Check for Security !



Tipping Operation:

To “RAISE” the Tipper body :

Check there are no overhead obstructions i.e. cables etc.

Choose Tip mode and Open the tailboard.

Locate the Tipper Isolation Switch

Select the ‘ON’ position.

Control the tip using the Controller

Press the “RAISE” button

Raise the body to the required height.

The body will automatically stop tipping when the ram is fully extended.

The tipping can be stopped at any time by releasing the “RAISE” button.

A buzzer will sound when the “RAISE” button is pressed.

To “LOWER” the Tipper Body :

Ensure no obstruction around the Tipper

Press the LOWER button to lower the body.

Keep depressed until the warning sounder ceases

Close the tailboard ensuring that it is securely locked.

Switch the Tipper Isolation Switch to the ‘OFF’ position.

Stuck Load !!

Never “Jolt” the Tipper to release stuck loads

Lower the Tipper and manually release the load

Raise Tipper to release residual load

Body Prop

WARNING



Never Stand or Work underneath an Un-propped body.

Deployment of the Body Prop :

Park the vehicle on a firm and level surface, and apply the handbrake.

Raise the Tipper bed.

Raise the body prop by pulling up on the handle.

Rotate the body prop until it stops.



Lower the body until it rests on the prop.

Turn the Isolation Switch to the 'OFF' position.

Remove the keys from the vehicle ignition.



Stowing the Body Prop

Stowing the Prop is a reversal of the deployment procedure



Parts and Accessories

